

IDP Entry-Fit™ Steel Door Frames

Installation Instructions

Snap-On Casing



INTERNATIONAL DOOR PRODUCTS

**IDP Inc
21300 W. 8 Mile Rd.
Southfield, MI 48075
248-352-0044
www.idpframes.com**



IDP Entry-Fit™ Steel Door Frames

SNAP ON CASING INSTALLATION INSTRUCTIONS

If casing retainer clips are not pre-installed, follow instructions below.




Snap on Casing Kit Contents for each side

- 2 ea. Jamb Casing
- 1 ea. Header Casing
- 2 ea. Corner Brackets
- 15 ea. Casing retainer clip
- 15 ea. #6 x 1-5/8" bugle head screw




1. Examine retainer clip. One side has an undercut 1/8" from edge. Position clip on frame with undercut tight to edge of frame and with the hole lined up with the hole in frame. Secure with #6 x 1-5/8" bugle head screw. Repeat for all remaining holes in frame. 6 clips on each jamb and 3-4 clips on header depending on width.

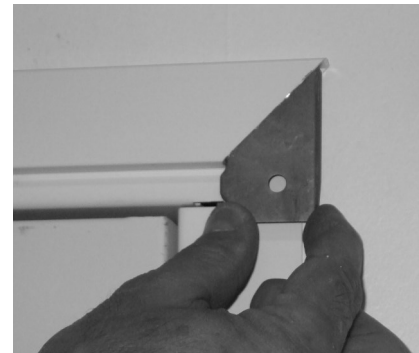

3. Insert casing corner brackets into header.



2. Position header casing over top edge of clips and center. Tap casing toward door near each clip to snap it over the clips.

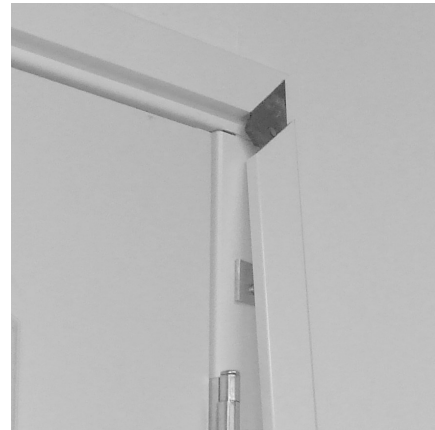

4. Slide jamb casing over corner bracket. Push casing upward to meet miter on header casing. Adjust header casing and jamb casing to obtain a tight miter joint. Position casing over outside edge of clips and tap casing toward inside of frame near each clip to snap it over clips. Repeat for other jamb.